



Mr. SLIM

Zuba Central Heat Pump

User Manual

English

Introduction

The Zuba-Central is a Heat Pump using Hyper Heat technology. The Zuba-Central consists of outdoor unit and multi position ducted air handling indoor unit which are connected together and controlled by a PAR 21MAA controller.

Application

Constant energy price increases in Canada and around the globe is increasing the consumer's requirements to source more efficient ways to cool and heat their homes. The Zuba-Central Hyper Heat Pump can save energy and reduce greenhouse gas emissions due to its high seasonal operation efficiency in both cooling and heating seasons. In addition to this the new two phases liquid gas injection technology allows high heating output at ambient temperatures below -30°C . The system is available with auxiliary back-up heating options of hydronic hot water, electrical resistance heat or SCR ducted heater.

Emergency Auxiliary back-up heat is also activated in case of system malfunction.

Contents

Safety Precautions	3
Zuba-Central controller --PAR21MAA	5
Screen Configuration	6
Setting the Day of the Week and Time	8
Operation	9
Timer	11
Error Codes indication	22
User maintenance	23

Safety Precautions

- Before installing the unit, make sure you read all the “Safety Precautions”.
- The “Safety Precautions” provide very important points regarding safety. Make sure you follow them.
- Please report to or obtain necessary permits from Local Electrical authority before connection to the system

Symbols used in the text

Warning:

Describes precautions that should be observed to prevent danger of injury or death to the user

Caution:

Describes precautions that should be observed to prevent damage to the unit

Warnings:

- For appliances when installed should not be accessible to the general public.
- The unit must not be installed by the user. Ask the dealer or an authorized company to install the unit. If the unit is installed improperly, water leakage, electric shock or fire may result.
- Do not stand on, or place any items on the unit.
- Do not splash water over the unit and do not touch the unit with wet hands. An electric shock may result.
- Do not spray combustible gas close to the unit. Fire may result.
- Do not place a gas heater or any other open-flame appliance where it will be exposed to the air discharged from the unit. Incomplete combustion may result.
- Do not remove the front panel or the fan guard from the outdoor unit or the panels from the indoor unit when it is running.
- When you notice exceptionally abnormal noise or vibration, stop operation, turn off the power switch, and contact your dealer.
- Never insert fingers, sticks etc. into the intakes or outlets.
- If you detect odd smells, stop using the unit, turn off the power switch and consult your dealer. Otherwise, a breakdown, electric shock or fire may result.
- This system is NOT intended for use by children or infirm persons without supervision.
- Young children must be supervised to ensure that they do not play with the air conditioner.
- If the refrigeration gas blows out or leaks, stop the operation of the system, thoroughly ventilate the room, and contact your dealer.

Caution:

- Do not use any sharp object to push the buttons, as this may damage the remote controller.
- Never block or cover the indoor or outdoor unit's intakes or outlets.

Disposing of the unit

- When you need to dispose of the unit, consult your dealer.

Zuba-Central controller

Display Section

For purposes of this explanation, all parts of the display are shown. During actual operation, only the relevant items will be displayed.

Identifies the current operation
Shows the operating mode, etc.
* Multi language display is supported.

"Centrally Controlled" indicator
Indicates that operation of the remote controller has been prohibited by a master controller.

"Timer is Off" indicator
Indicates that the timer is off.

Temperature Setting
Shows the target temperature.

Day-of-Week
Shows the current day of the week.

Time/Timer Display
Shows the current time, unless the simple or Auto Off timer is set.
If the simple or Auto Off timer is set, shows the time remaining.

"Sensor" indication
Displayed when the remote controller sensor is used.


"Locked" indicator
Indicates that remote controller buttons have been locked.

"Clean The Filter" indicator
Comes on when it is time to clean the filter.

Timer indicators
The indicator comes on if the corresponding timer is set.

Fan Speed indicator
Shows the selected fan speed.

Ventilation indicator
Appears when the unit is running in Ventilation mode.

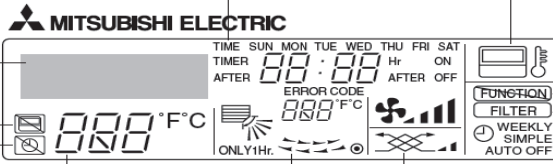

Up/Down Air Direction indicator
The indicator shows the direction of the outcoming airflow.

"One Hour Only" indicator
Displayed if the airflow is set to Low and downward during COOL or DRY mode. (Operation varies according to model.)
The indicator goes off after one hour when the airflow direction also changes.

Room Temperature display
Shows the room temperature. The room temperature display range is 8-39 °C, 46-102 °F.
The display blinks if the temperature is less than 8 °C, 46 °F or 39 °C, 102 °F or more.

Louver display
Indicates the action of the swing louver. Does not appear if the louver is stationary.

(Power On indicator)
Indicates that the power is on.

Operation Section

Set Temperature buttons

▽ Down

△ Up

Timer Menu button (Monitor/Set button)



Mode button (Return button)

Set Time buttons

▽ Back

△ Ahead

Timer On/Off button (Set Day button)

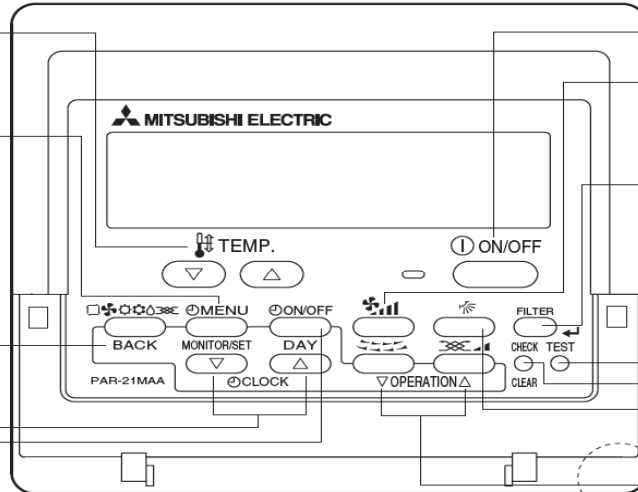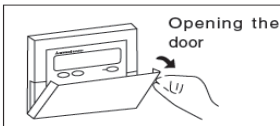

ON/OFF button

Fan Speed button

Filter button (<Enter> button)

Test Run button

Check button (Clear button)

Airflow Up/Down button

Louver button (▽ Operation button)

▽ To return operation number

Ventilation button (△ Operation button)


△ To go to next operation number

Note:

- "PLEASE WAIT" message
This message is displayed for approximately 3 minutes when power is supplied to the indoor unit or when the unit is recovering from a power failure.
- "NOT AVAILABLE" message
This message is displayed if a button is pressed to operate a function that the indoor unit does not have.

How to use the Zuba-Central controller

Screen Configuration

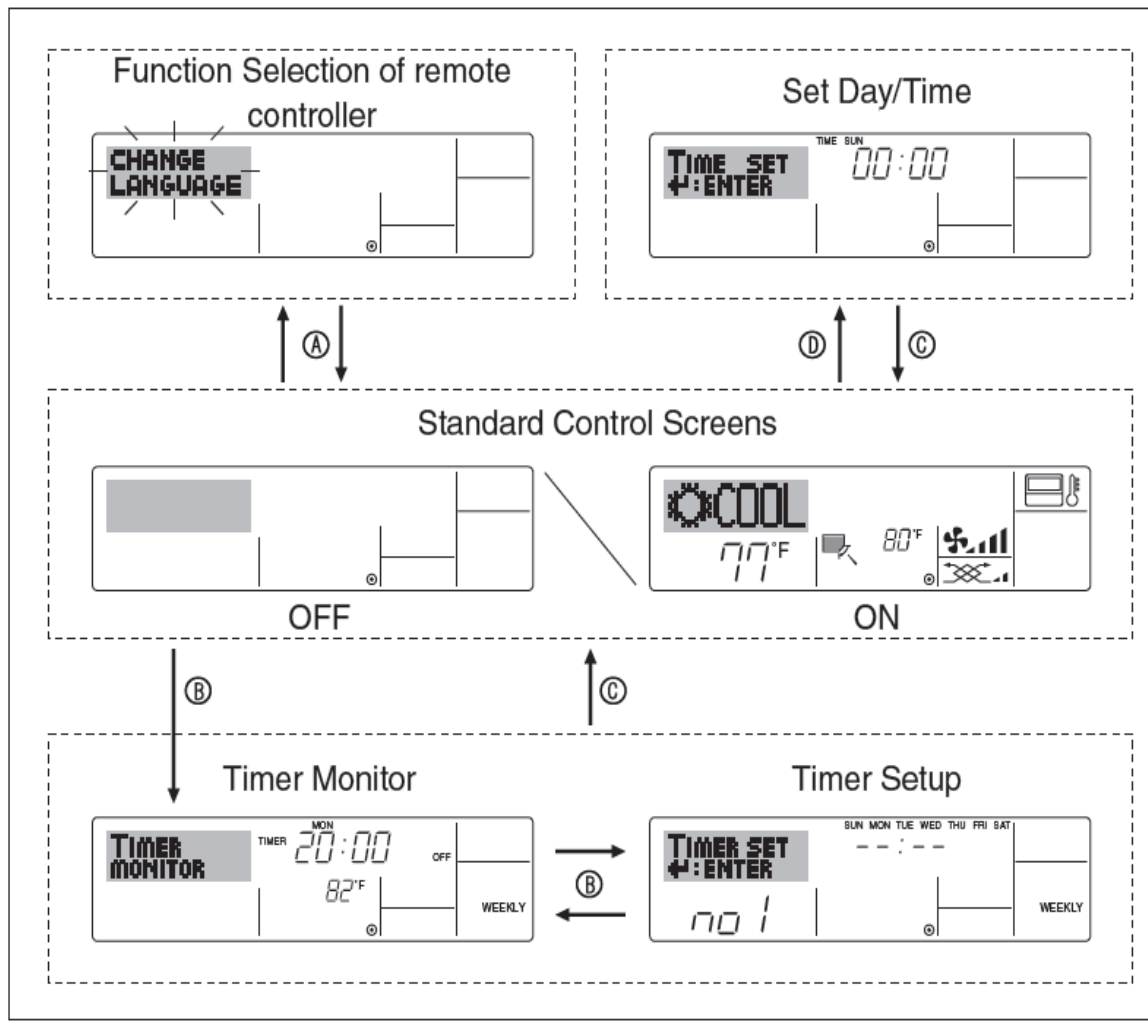

Screen Types

For details on setting the language for the remote controller display, refer to section 8. Function Selection.

The initial language setting is English.

- **Function Selection of remote controller:**
Set the functions and ranges available to the remote controller (timer functions, operating restrictions, etc.)
- **Set Day/Time**
Set the current day of the week or time.
- **Standard Control Screens**
View and set the air conditioning system's operating status
- **Timer Monitor**
View the currently set timer (weekly timer, simple timer, or Auto Off timer)
- **Timer Setup**
Set the operation of any of the timers (weekly timer, simple timer, or Auto Off timer).


How to change the screen

- A. Hold down both the Mode button and the Timer On/Off button for 2 seconds.
- B. Press the Timer Menu button.
- C. Press the Mode (Return) button.
- D. Press either of the Set Time buttons (Back or Ahead)


To return to main screen

Hold down both the Mode button and the Timer On/Off button for 2 seconds.

4. Setting the Day of the Week and Time

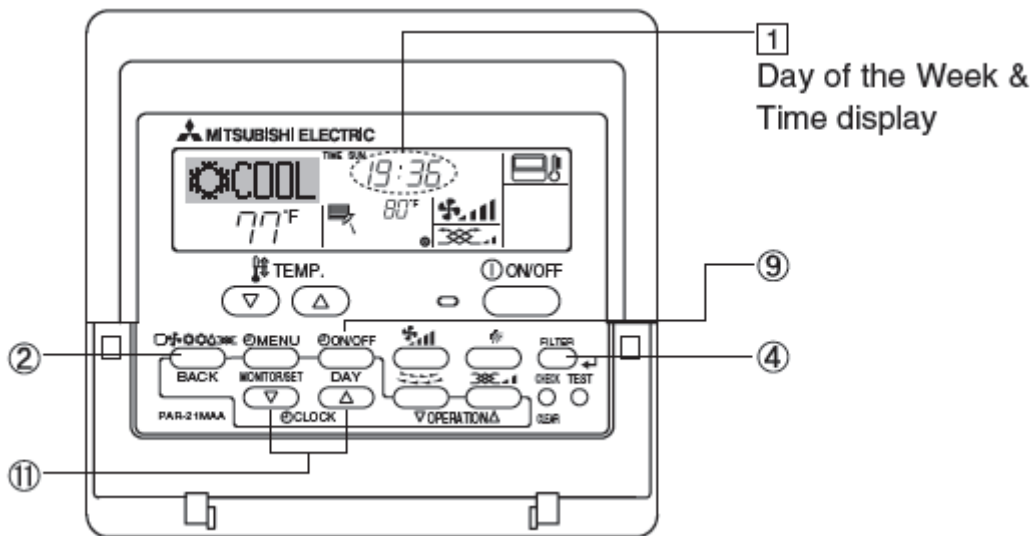


Note: The day and time will not appear if clock use has been disabled at Function Selection of remote controller.

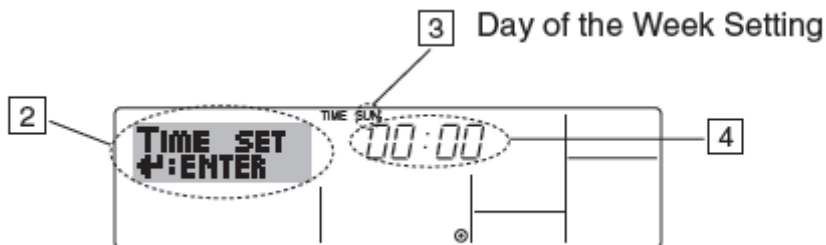

1. Press the ∇ or Δ Set Time button (11) to show display [2].
2. Press the Timer On/Off (Set Day) button (9) to set the day.
Each press advances the day shown at [3]:
3. Sun > Mon > ... > Fri > Sat.
4. Press the appropriate Set Time button (11) as necessary to set the time.
As you hold the button down, the time display (at 4) will increment first in one-minute intervals, then in ten-minute intervals, and then in one-hour intervals.
5. After making the appropriate settings at Steps 2 and 3, press the Filter button (4) to lock in the values.
6. Press the Mode button (2) to exit

5. Operation

5.1. Turning ON/OFF

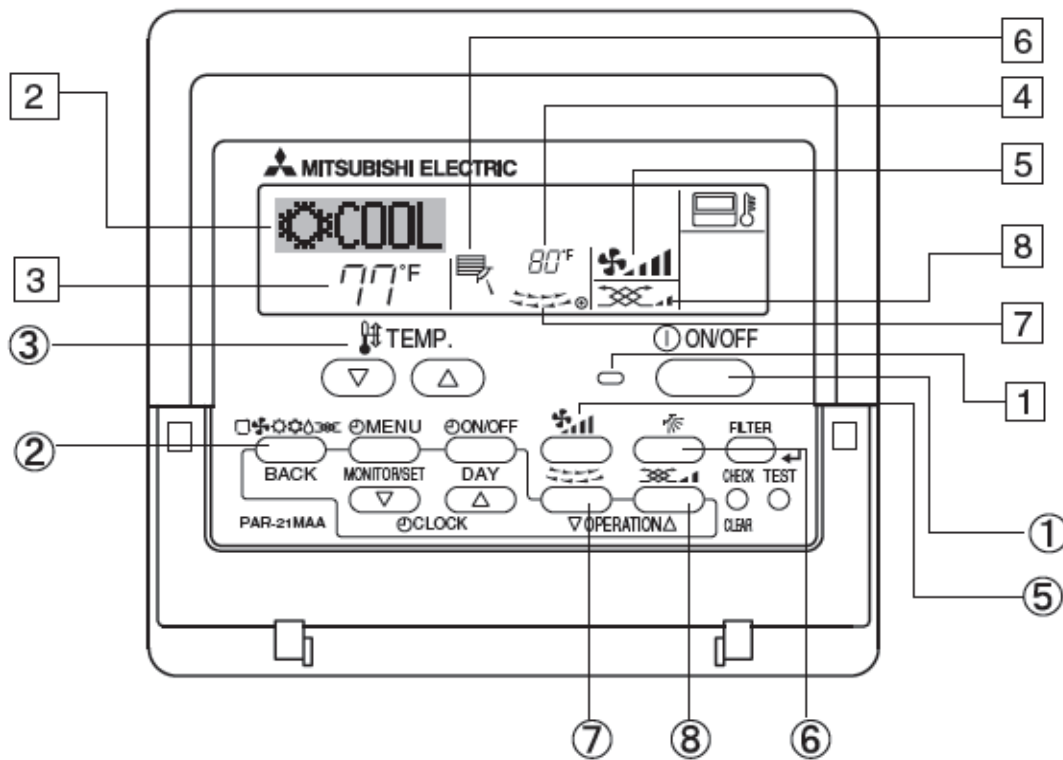

<To Start Operation>

Press the ON/OFF button.

- The ON lamp [1] and the display area will light up or come on.

Note: When the unit is restarted, initial settings are as follows.


	Remote Controller settings
Mode	Last operation mode
Temperature setting	Last set temperature








<To Stop Operation>

Press the ON/OFF button again.

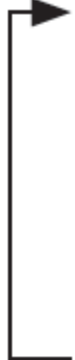- The ON lamp [1] and the display area go off.

5.2. Mode select

Press the operation mode () button and select the operation mode displays in [2] above.

		Cool Mode
		Drying mode
		Fan mode
		Heating mode
		Automatic (cooling/heating) mode <Only heat pump type>
		Ventilation mode Only indicated on Wired remote controller when LOSSNAY connected

5.3. Temperature setting

To decrease the room temperature:

Press button (3) to set the desired temperature. The selected temperature is displayed [3].

To increase the room temperature:

Press button (3) to set the desired temperature. The selected temperature is displayed [3].

- Available temperature ranges are as follows:

Cooling/Drying: 19 - 30 °C, 67 - 87 °F

Heating: 17 - 28 °C, 63 - 83 °F

Automatic: 19 - 28 °C, 67 - 83 °F

- The display blinks either 8 °C - 39 °C, 46 °F - 102 °F to inform you if the room temperature is lower or higher than the displayed temperature.

5.4. Fan speed setting

Pressing the Fan Speed button will display the follow
“NOT AVAILABLE” message

The ZUBA Central has fixed speeds for Heating and Cooling.

6. Timer

6.1. For Wired Remote-controller

You can use Function Selection of remote controller to select which of three types of timer to use:

- (1) Weekly timer,
- (2) Simple timer, or
- (3) Auto Off timer

6.1.1. Weekly Timer

The weekly timer can be used to set up to eight operations for each day of the week.

- Each operation may consist of any of the following:
 - ON/OFF time together with a temperature setting, or
 - ON/OFF time only, or
 - Temperature setting only
- When the current time matches a set time point, the timer performs the set operation.


Time setting resolution for this timer is one minute.

Note:

*1. Weekly Timer/Simple Timer/Auto Off Timer cannot be used at the same time.
*2. The weekly timer will not operate when any of the following conditions are in effect.

- The timer feature is off;
- The system is in a malfunction state;
- Test run is in progress;
- Remote controller is in self-check mode or remote controller check;
- the user is in the process of setting a function or setting the timer;
- the user is in the process of setting the current day of the week or time;
- System is under central control

Specifically, the system will not carry out operations (unit on, unit off or temperature setting) during these conditions.

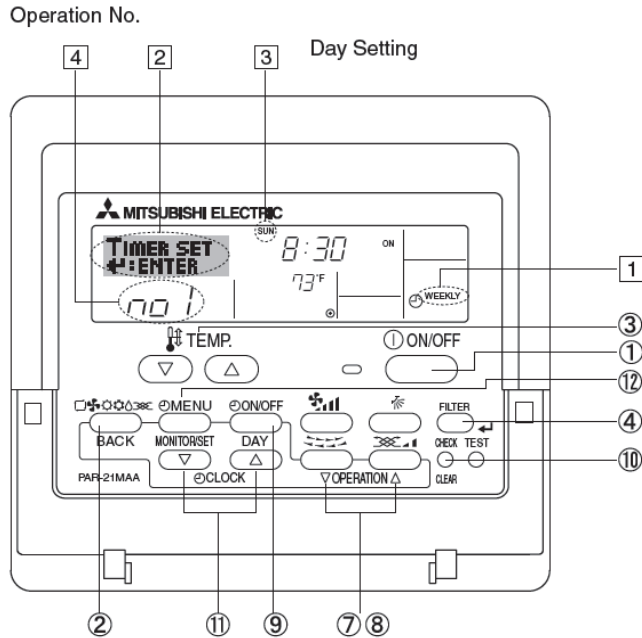

<How to Set the Weekly Timer>

1. Be sure that you are at a standard control screen, and that the weekly timer indicator [1] is shown in the display.
2. Press the Timer Menu button (12), so that the “Set Up” appears on the screen (at [2]). (Note that each press of the button toggles the display between “Set Up” and “Monitor”.)
3. Press the Timer On/Off (Set Day) button (9) to set the day. Each press advances the display at [3] to the next setting, in the following sequence: “Sun Mon Tues Wed Thurs Fri Sat” > “Sun” >...> “Fri” > “Sat”> “Sun Mon Tues Wed Thurs Fri Sat”...
4. Press the ∇ or \triangle Operation button ((7) or (8)) as necessary to select the appropriate operation number (1 to 8) [4] .
 * Your inputs at Steps 3 and 4 will select one of the cells from the matrix illustrated below.
 (The remote-controller display at left shows how the display would appear when setting Operation 1 for Sunday to the values indicated below.)

Setup Matrix

Op No.	Sunday	Monday	...	Saturday
No. 1	<ul style="list-style-type: none"> • 8:30 • ON • 73 °F 			
No. 2	<ul style="list-style-type: none"> • 10:00 • OFF 	<ul style="list-style-type: none"> • 10:00 • OFF 	<ul style="list-style-type: none"> • 10:00 • OFF 	<ul style="list-style-type: none"> • 10:00 • OFF
...				
No. 8				

↓

<Operation 1 settings for Sunday>
 Start the air conditioner at 8:30, with the temperature set to 73 °F.

↓


<Operation 2 settings for every day>
 Turn off the air conditioner at 10:00.

Note:

By setting the day to “Sun Mon Tues Wed Thurs Fri Sat”, you can set the same operation to be carried out at the same time every day.(Example: Operation 2 above, which is the same for all days of the week.)

<Setting the Weekly Timer>

Shows the time setting

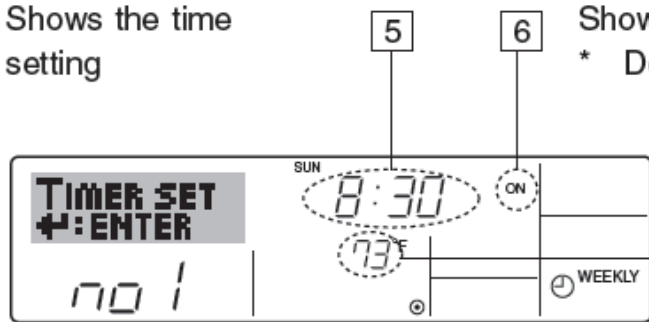


Shows the selected operation (ON or OFF)
* Does not appear if operation is not set.

Shows the temperature setting
* Does not appear if temperature is not set.

5. Press the appropriate Set Time button (11) as necessary to set the desired time (at [5]).
* As you hold the button down, the time first increments in minute intervals, then in ten-minute intervals, and then in one-hour intervals.
6. Press the ON/OFF button (1) to select the desired operation (ON or OFF), at [6].
* Each press changes the next setting, in the following sequence:
No display (no setting) “ON” < > “OFF”
7. Press the appropriate Set Temperature button (3) to set the desired temperature at [7].
* Each press changes the setting, in the following sequence: No display (no setting) 75 < > 77 ... 84 < > 87 53 < ... > 73 No display.
(Available range: The range for the setting is 12 °C, 53 °F to 30 °C, 87 °F. The actual range over which the temperature can be controlled, however, will vary according to the type of the connected unit.)
8. After making the appropriate settings at Steps 5, 6 and 7, press the Filter button (4) to lock in the values.
To clear the currently set values for the selected operation, press and quickly release the Check (Clear) button (10) once.
 - The displayed time setting will change to “—:—”, and the On/Off and temperature settings will all disappear.
 - (To clear all weekly timer settings at once, hold down the Check (Clear) button (10) for two seconds or more. The display will begin blinking, indicating that all settings have been cleared.)
 - Note: Your new entries will be cancelled if you press the Mode (Return) button (2) before pressing the Filter button (4) . If you have set two or more different operations for exactly the same time, only the operation with the highest Operation No. will be carried out.
9. Repeat Steps 3 to 8 as necessary to fill as many of the available cells as you wish.
10. Press the mode (Return) button (2) to return to the standard control screen and complete the setting procedure.
11. To activate the timer, press the Timer On/Off button (9), so that the “Timer Off” indication disappears from the screen. Be sure that the “Timer Off” indication is no longer displayed.
* If there are no timer settings, the “Timer Off” indication will blink on the screen.


<How to View the Weekly Timer Settings>

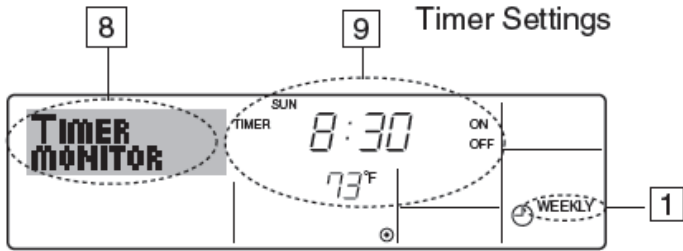

1. Be sure that the weekly timer indicator is visible on the screen (at [1]).
2. Press the Timer Menu button (12) so that “Monitor” is indicated on the screen (at [8]).
3. Press the Timer On/Off (Set Day) button (9) as necessary to select the day you wish to view.
4. Press the ∇ or \triangle Operation button ((7) or (8)) as necessary to change the timer operation shown on the display (at [9]).
* Each press will advance to the next timer operation, in order of time setting.
5. To close the monitor and return to the standard control screen, press the Mode (Return) button (2).


<To Turn Off the Weekly Timer>

Press the Timer On/Off button (9) so that “Timer Off” appears at [10].

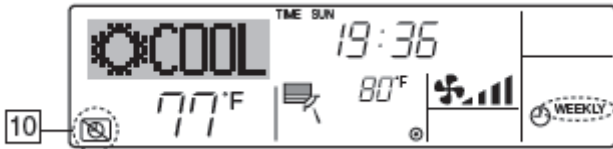

<To Turn On the Weekly Timer>

Press the Timer On/Off button (9) so that the “Timer Off” indication (at [10]) goes dark.

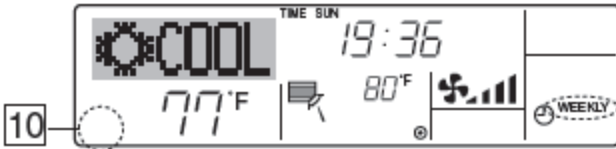

6.1.2. Simple Timer

You can set the simple timer in any of three ways.


- Start time only: The air conditioner starts when the set time has elapsed.
- Stop time only: The air conditioner stops when the set time has elapsed.
- Start & stop times: The air conditioner starts and stops at the respective elapsed times.

The simple timer (start and stop) can be set only once within a 72-hour period.


The time setting is made in hour increments.

Note:

- *1. Weekly Timer/Simple Timer/Auto Off Timer cannot be used at the same time.
- *2. The simple timer will not operate when any of the following conditions is in effect. The timer is off; the system is in malfunction state; a test run is in progress; the remote controller is undergoing self-check or remote controller check; the user is in the process of selecting a function; the user is in the process of setting the timer; the system is under central control. (Under these conditions, On/Off operation is prohibited.)

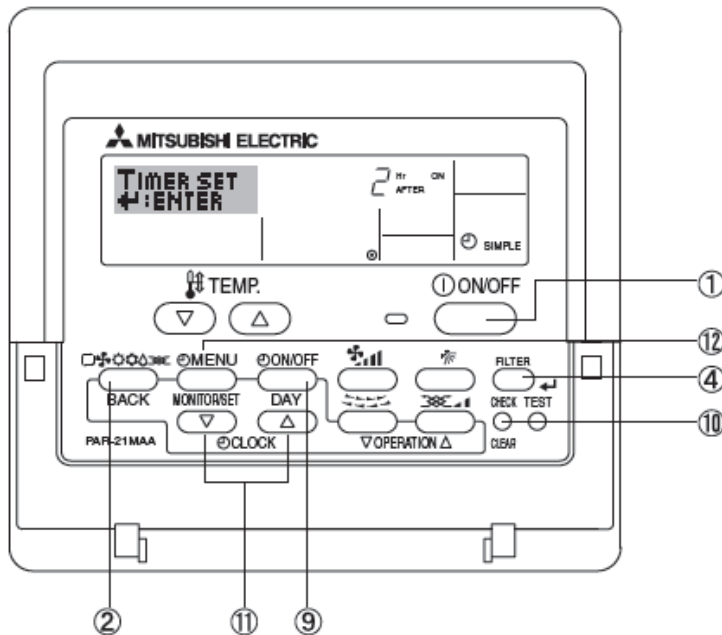

<How to Set the Simple Timer>

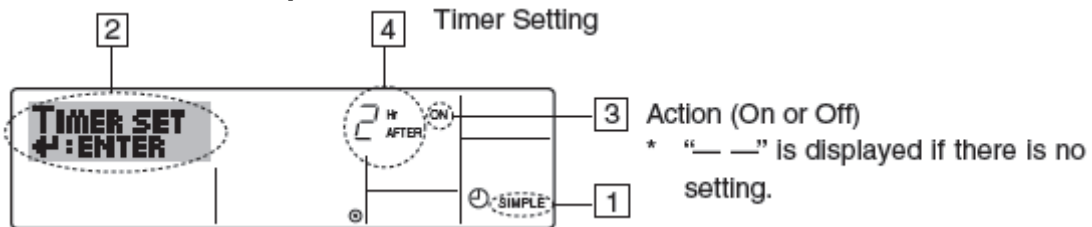


1. Be sure that you are at a standard control screen, and that the simple timer indicator is visible in the display (at [1]).

When something other than the Simple Timer is displayed, set it to SIMPLE TIMER using the function selection of remote controller (see 8.[3] (3) timer function setting).

2. Press the Timer Menu button (12), so that the “Set Up” appears on the screen (at [2]). (Note that each press of the button toggles the display between “Set Up” and “Monitor”.)
 3. Press the ON/OFF button (1) to display the current ON or OFF simple timer setting. Press the button once to display the time remaining to ON, and then again to display the time remaining to OFF. (The ON/OFF indication appears at [3]).
 - “ON” timer: The air conditioner will start operation when the specified number of hours has elapsed.
 - “OFF” timer: The air conditioner will stop operation when the specified number of specified number of hours has elapsed.
 4. With “ON” or “OFF” showing at [3]: Press the appropriate Set Time button (11) as necessary to set the hours to ON (if “ON” is displayed) or the hours to OFF (if “OFF” is displayed) at [4].
 - Available Range: 1 to 72 hours
 5. To set both the ON and OFF times, repeat Steps 3 and 4.
 - * Note that ON and OFF times cannot be set to the same value.
 6. To clear the current ON or OFF setting: Display the ON or OFF setting(see step 3) and then press the Check (Clear) button(10) so that the time setting clears to “—” at [4]. (If you want to use only an ON setting or only an OFF setting, be sure that the setting you do not wish to use is shown as “—”.)
 7. After completing steps 3 to 6 above, press the Filter button (4) to lock in the value.
- Note: Your new settings will be cancelled if you press the Mode (Return) button before pressing the Filter (4) button.
8. Press the Mode (Return) button (2) to return to the standard control screen.
 9. Press the Timer On/Off button (9) to start the timer countdown. When the timer is running, the timer value is visible on the display. Be sure that the timer value is visible and appropriate.


<Viewing the Current Simple Timer Settings>

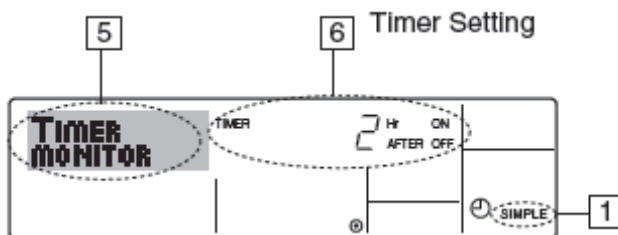

1. Be sure that the simple timer indicator is visible on the screen (at [1]).
2. Press the Timer Menu button (9), so that the “Monitor” appears on the screen (at [5]).
 - If the ON or OFF simple timer is running, the current timer value will appear at [6].
 - If ON and OFF values have both been set, the two values appear alternately.
3. Press the Mode (Return) button (2) to close the monitor display and return to the standard control screen.


<To Turn Off the Simple Timer>

Press the Timer On/Off button (9) so that the timer setting no longer appears on the screen (at [7]).

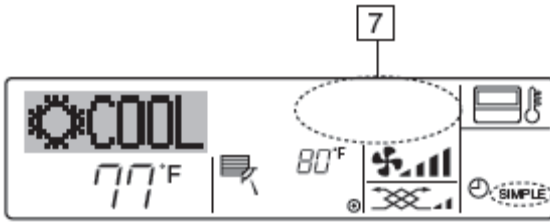

<To Turn On the Simple Timer>

Press the Timer On/Off button (9) so that the timer setting becomes visible at [7].

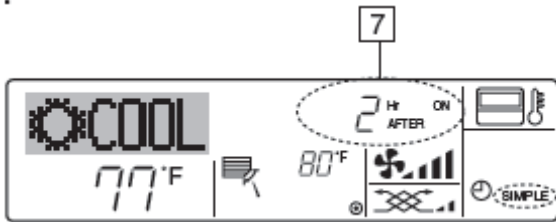

Examples

When ON and OFF times have both been set at the simple timer then, operation and display are as indicated below

Example 1: Start the timer with ON time set earlier than OFF time


ON Setting: 3 hours

OFF Setting: 7 hours



At Timer Start

Display shows the timer's ON setting (hours remaining to ON).

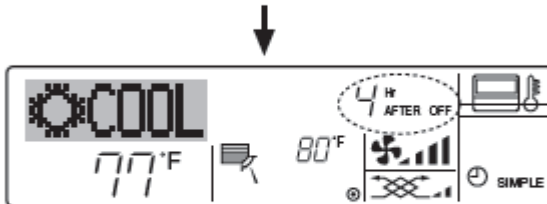

At 3 hours after timer start

Display changes to show the timer's OFF setting (hours remaining to OFF).

The time displayed is OFF setting (7 hours) – ON setting (3 hours) = 4 hours.




At 7 hours after timer start

The air conditioner goes off, and will remain off until it is restarted.

Example 2: Start the timer with OFF time set earlier than ON time

ON Setting: 5 hours

OFF Setting: 2 hours

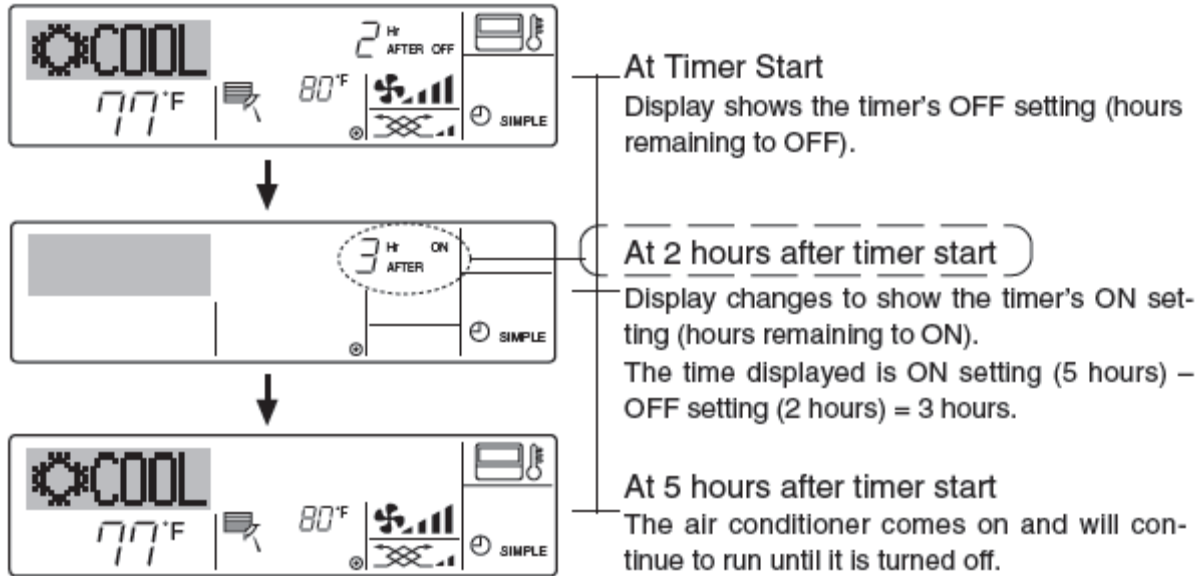

This timer begins countdown when the air conditioner starts and shuts the air conditioner off when the set time has elapsed.

Available settings run from 30 minutes to 4 hours in 30-minute intervals.

Note:

- *1. Weekly Timer/Simple Timer/Auto off Timer cannot be used at the same time.
- *2. The Auto Off timer will not operate when any of the following conditions is in effect. The timer is off; the system is in malfunction state; a test run is in progress; the remote controller is undergoing self-check or remote controller check; the user is in the process of selecting a function; the user is in the process of setting the timer; the system is under central control. (Under these conditions, On/Off operation is prohibited.)

<How to Set the Auto Off Timer>

1. Be sure that you are at a standard control screen, and that the Auto Off timer indicator is visible in the display (at 1). When something other than the Auto Off Timer is displayed, set it to AUTO OFF TIMER using the function selection of remote controller (see 8.[4]-3 (3) timer function setting).
2. Hold down the Timer Menu button (12) for 3 seconds so that the "Set Up" appears on the screen (at 2). (Note that each press of the button toggles the display between "Set Up" and "Monitor".)
3. Press the appropriate Set Time button (11) as necessary to set the OFF time (at 3).

4. Press the Filter button (4) to lock in the setting.


Note:

Your entry will be cancelled if you press the Mode (Return) button (2) before pressing the Filter button (4).

5. Press the Mode (Return) button (2) to complete the setting procedure and return to the standard control screen.

6. If the air conditioner is already running, the timer starts countdown immediately. Be sure to check that the timer setting appears correctly on the display.

<Checking the Current Auto Off Timer Setting>

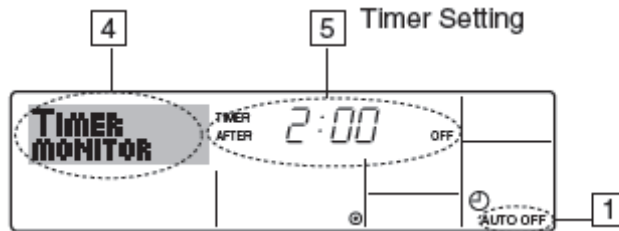

1. Be sure that the “Auto Off” is visible on the screen (at 1).


2. Hold down the Timer Menu button (12) for 3 seconds so that “Monitor” is indicated on the screen (at 4).

• The timer remaining to shutdown appears at 5.


3. To close the monitor and return to the standard control screen, press the Mode (Return) button (2).

<To Turn off the Auto off Timer>

Hold down the Timer On/Off button (9) for 3 seconds so that “Timer Off” appears (at [6]) and the timer value (at [7]) disappears.

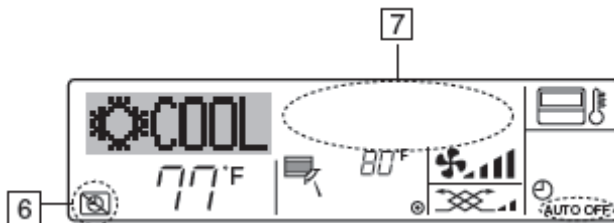


Alternatively, turn off the air conditioner itself. The timer value (at [7]) will disappear from the screen.

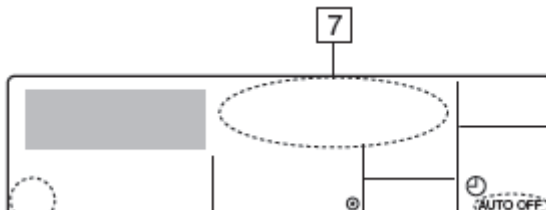

<To Turn On the Auto Off Timer>


Hold down the Timer On/Off button (9) for 3 seconds. The "Timer Off" indication disappears (at 6), and the timer setting comes on the display (at 7).

Alternatively, turn on the air conditioner. The timer value will appear at 7.

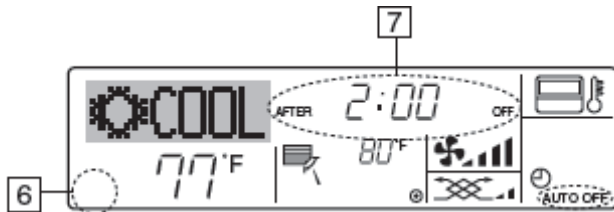


7 Error Codes indication

play during operation with automatic mode

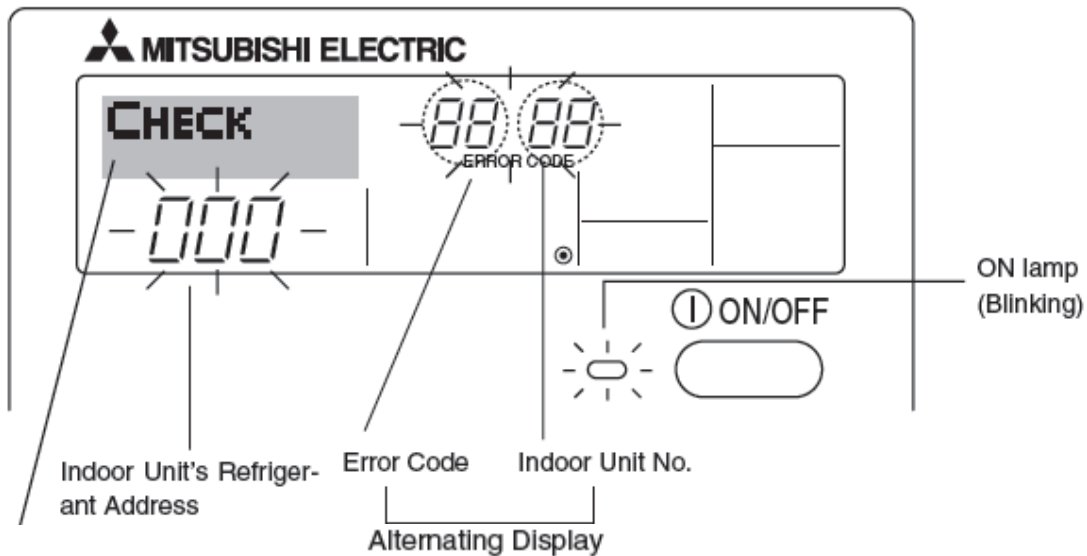

If you have entered contact number to be called in the event of a problem, the screen displays this number. (You can set this up under Function Selection of remote controller.)

If the ON lamp and error code are both blinking: This means that the system is out of order and operation has been stopped (and cannot resume). Take note of the indicated unit number and error code, then switch off the power to the system and call your dealer or service provider.

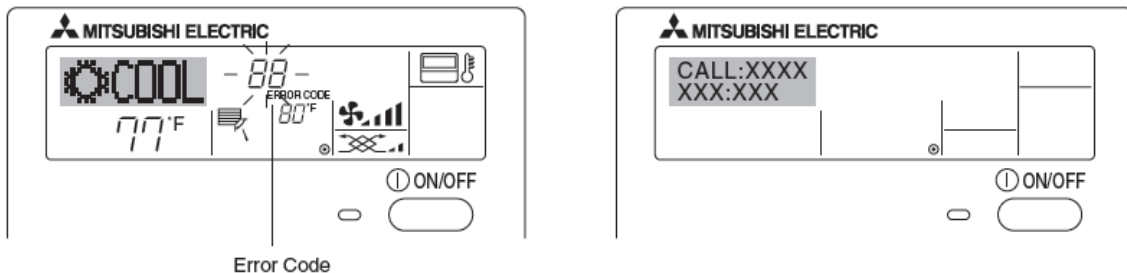

If only the error code is blinking (while the ON lamp remains lit): Operation is continuing, but there may be a problem with the system. In this case, you should note down the error code and then call your dealer or servicer for advice.

Note : If you have entered contact number to be called in the event of a problem, push the Check button to display it on the screen.

User maintenance

Clean or replace filter monthly during heating and cooling season

Replace the filter annually.

Caution

- Before you start cleaning, stop operation and turn OFF the power supply.

Cleaning the filters

- Clean the filters using a vacuum cleaner. If you do not have a vacuum cleaner, tap the filters against a solid object to knock off dirt and dust.